 


INSTRUCTIONS FOR BATTERY OPERATED TOYS:

1. BATTERIES SHOULD ONLY BE INSERTED OR CHANGED BY AN ADULT.
2. INSERT BATTERIES CORRECTLY IN THE MANNER SHOWN ELSEWHERE ON TOY OR PACKAGING.
3. ONLY USE THE SAME TYPE OF BATTERY – DO NOT MIX BRANDS OR TYPES.
4. REPLACE ALL BATTERIES AT THE SAME TIME.
5. DO NOT MIX OLD AND NEW BATTERIES.
6. DO NOT LEAVE BATTERIES IN THE TOY FOR LONG PERIODS OF TIME WHEN IT IS NOT IN USE.
7. DO NOT ATTEMPT TO RE-CHARGE NON-RECHARGEABLE BATTERIES.
8. REMOVE RECHARGEABLE BATTERIES FROM THE TOY BEFORE RE-CHARGING UNLESS INSTRUCTIONS THAT YOU CAN DO SO.
9. REMOVE EXHAUSTED BATTERIES FROM THE TOY.
10. DISPOSE OF UNUSED BATTERIES PROPERLY. DO NOT THROW INTO FIRE OR ATTEMPT TO PEN. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK
11. AT ALL TIMES KEEP SMALL BATTERIES OUT OF REACH FROM CHILDREN, CHOKING HAZARD BATTERIES ARE HARMFUL IF SWALLOWED.
12. SEEK MEDICAL ADVICE IF A SMALL BATTERY HAS BEEN SWALLOWED ACCIDENTALLY.
13. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE USED.
14. BATTERIES MUST BE INSERTED WITH CORRECT POLARITY.
15. RECHARGEABLE BATTERIES ARE CHARGED UNDER ADULT SUPERVISION.
16. SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
17. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

IMPORTANT:

- During the replacement of your used batteries, we request that you follow the current regulations as to their elimination.
- We thank you for depositing them in a location foreseen for that purpose to ensure their elimination in a sure manner and with respect for the environment.
- Processing of electronic equipment at the end of their service life.
- The symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste.
- It must be brought to an electric and electronic waste collection point for recycling and disposal.
- By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources.

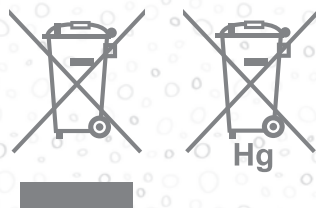

John Adams

age 3+

WARNING: CHOKING HAZARD CONTAINS SMALL PARTS, NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS OLD. THESE PRODUCTS MUST NOT BE USED IN CONTACT WITH FOODS. ALL THE TOY ACCESSORIES ARE FOR TOY DOLLS ONLY AND NOT FOR HUMAN BABY OR CHILD. DO NOT LET YOUR CHILD MOUTH THEM. PLEASE DISPOSE OF ALL FASTENINGS FOR SAFETY BEFORE GIVING DOLL TO CHILD.

Colours and contents may vary from those shown. Please retain this information.

John Adams creates lots of fantastic dolls, craft, fashion and science products so why not visit www.johnadams.co.uk

Tiny Tears® is a registered trademark of Licensing International Limited.

John Adams Leisure Ltd., Marketing House, Blackstone Road,
Huntingdon, Cambs, PE29 6EF, UK.
For customer service Tel: 01480 414361
Email: customerservices@johnadams.co.uk
Made in China. ©2014 John Adams Leisure Ltd.



John Adams

tiny tears

Interactive doll with sound

age 3+



Please read this information sheet before giving the doll to a child to play with.

The batteries supplied with this doll are 'try me' batteries. The amount of use within the store and age will affect the period of use you may gain from them. If the doll is not working correctly, then follow these instructions

To change the batteries (this should be done by an adult):

- To insert new batteries, undo the Velcro-closure on the back of the doll's outfit.
- Open the battery-cover lid using a small Cross-head screwdriver and insert 3 new LR44 / button cell batteries, following the markings on the inside of the battery compartment.
- Close the battery-cover lid.

SALINES / ALKALINES
3 X LR44 1.5V DC



Care and maintenance:

- The doll contains electronic components and can be damaged by immersion in water.
- Surface clean with a damp cloth only.



Important:

- To avoid damage to the electronic components, do not immerse the doll in water.
- The doll will only work properly when batteries are in good condition and inserted correctly.
- Make sure that positive (+) and negative (-) poles are in the correct positions.

Functions:




Press my tummy, I cry, laugh or say "Mama"

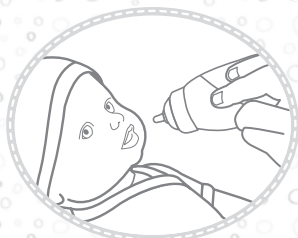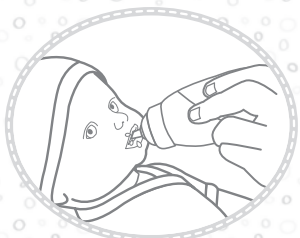

Feed me with water from the feeding bottle, I drink with sound.



(NB. Please feed doll with less than 1/8th of the bottle of water, approx. 20ml)

Remove feeding bottle from my mouth and I burp!

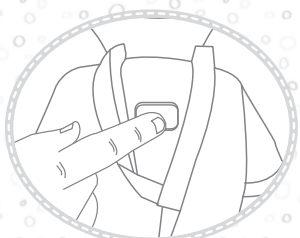

Press my back a few times, I cry with sound... and with 'real tears'!

(upper back button, see pic above)

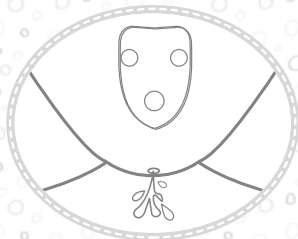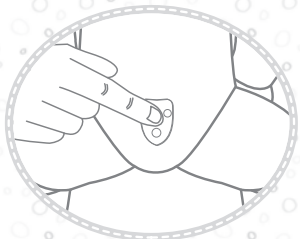

Sit me on my potty, or press my back, I make 'real' wetting!

(lower back button, see pic above)

Fault-finding:

Fault:	Action:
The doll's functions do not work.	1. Open the battery-cover lid, insert 3 new LR44 / button cell batteries (by following the instructions on the inside of the battery compartment) and close the battery-cover lid.
The doll's voice is inaudible.	1. Replace the batteries with 3 new LR44 / button cell batteries.
During feeding, water spills out from doll's mouth, even after feeding bottle has been put inside doll's mouth and being gently squeezed.	<ol style="list-style-type: none"> 1. Make sure the doll is in the lay-down position. 2. Feed the doll with less than 1/8th of the bottle of water (approx. 20ml) from the feeding bottle. 3. Put the tip of the feeding bottle inside the doll's mouth and push it in slightly until you hear doll's 'drinking' sound, then squeeze the bottle gently so that the water goes inside the doll's mouth. 4. If there is already enough water inside the doll and you continue to feed her, water will spill out from the doll's mouth. Stop feeding. Press the doll's back (upper back button) a few times, the doll will make crying sound with water coming out from the doll's eyes as 'real tears'. You can also press the doll's lower back button and the doll will wet.
The doll does not produce tears.	<ol style="list-style-type: none"> 1. Feed the doll with less than 1/8th of the bottle of water (approx. 20ml) from the feeding bottle. 2. Put the tip of the feeding bottle inside the doll's mouth and push it in slightly until you hear doll's 'drinking' sound, then squeeze the bottle gently so that the water goes inside the doll's mouth. 3. Press the doll's back (upper back button) a few times, the doll will make crying sound with water coming out from the doll's eyes as 'real tears'.
The doll does not wet.	<ol style="list-style-type: none"> 1. Feed the doll with less than 1/8th of the bottle of water (approx. 20ml) from the feeding bottle. 2. Put the tip of the feeding bottle inside the doll's mouth and push it in slightly until you hear doll's 'drinking' sound, then squeeze the bottle gently so that the water goes inside the doll's mouth. 3. Press the doll's lower back button and the doll will wet.