

Hello!

Thank you for purchasing
2-IN-1 PROJECTOR BARBIE!

Before you start to play, get set up on a table or on another flat, hard and clean surface and take everything out of the box. Carefully read the following instructions with an adult. You will then be ready to create beautiful drawings of Barbie and all her friends!



1 UNICORN PROJECTOR 
5 DRAWING SHEETS 
2 DISKS 
1 COMB 
1 BLACK MARKER 



CONTENT

BEFORE INSTALLING
THE BATTERIES,
MAKE SURE THAT THE
PROJECTOR IS IN THE
OFF POSITION.


THIS MUST BE DONE OUT BY AN ADULT.



 
 
- 1 Unscrew the protective cover under the toy.
- 2 Unscrew the battery compartment. Insert three new AA/LR6 batteries (1.5 V), preferably alkalines, making sure to observe polarity (+, -). 
- 3 Firmly re-tighten the compartment cover.
- 4 Insert the horn into the hole between the ears of the unicorn projector. 



YOUR 2-IN-1 PROJECTOR IS NOW READY!

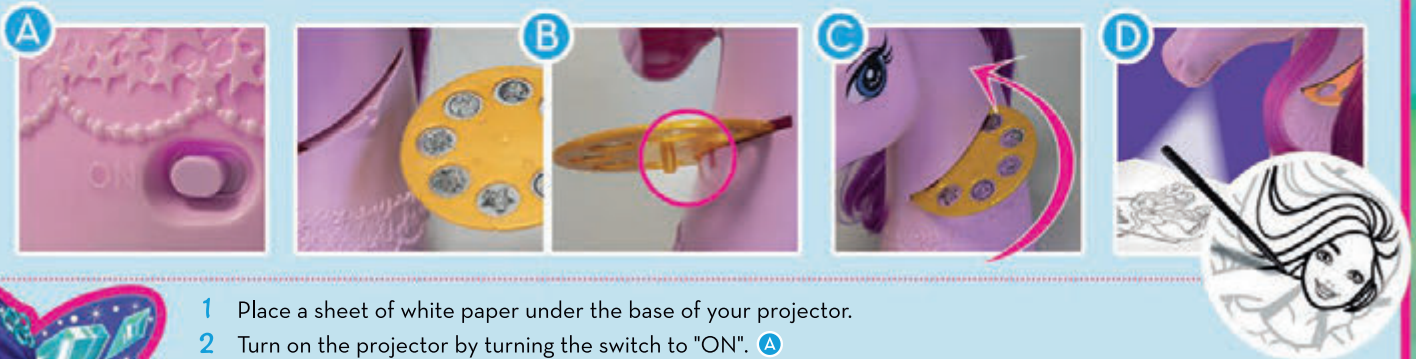INSTALLING
AND REPLACING BATTERIES

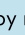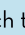

- 1 Place a sheet of white paper under the base of your projector.
- 2 Turn on the projector by turning the switch to "ON". 
- 3 Insert one of the two discs into the slot until it stops. Make sure that the disc is inserted on the right side: the spike must be downwards. 
- 4 You have 16 images to choose from! Choose the design you want to project by rotating the disc. 
- 5 Use the black marker to trace the image that appears on the paper.
- 6 When you have finished your drawing, turn your projector off by turning the switch to "OFF". 
- 7 Style your unicorn's hair with the included comb!

WOW, SHE'S SO PRETTY!

HOW TO USE YOUR
2-IN-1 PROJECTOR

Barbie

Item: 11049_01

INSTRUCTIONS

BARBIE® and associated trademarks and trade dress are owned by, and used under license from, Mattel. ©2021 Mattel

WARNING! Not suitable for children under 36 months. Choking hazard - contains small parts.

Warning, please not to hold the toy by the horn. Please remove all plastic tags, ties and any other protective elements which do not make up part of the toy before giving it to the child. Please keep information for future reference. Colours and contents may vary from those shown.

the + and - signs on the batteries are aligned with the corresponding + and - markings inside the compartment. Firmly re-tighten the compartment cover.

- Remove exhausted (used) batteries from the toy.
- Remove batteries from the toy if it is not going to be used for a long period of time.
- Do not short-circuit the supply terminals.
- Batteries should be replaced by an adult.
- Do not attempt to power battery products from the mains supply and do not insert connecting wires into electrical socket outlets.
- Dispose of used batteries at a recycling point. Never dispose of batteries in fire.

- Do not recharge non-rechargeable batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Rechargeable batteries are to be removed from the toy before charging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Insert batteries in the correct polarity.

© 2021 John Adams Leisure Ltd. John Adams Leisure Ltd. is constantly endeavouring to improve quality standards and therefore colours, sizes and contents may sometimes vary from those shown. Packaging and leaflets printed on recycled paper wherever possible. John Adams Leisure Ltd., PE28 4YA, England. EU authorised representative: John Adams Leisure EU Ltd., D06 H635, Ireland. For customer services call 01480 414361 or email customerservices@johnadams.co.uk Please retain this information for reference. MADE IN CHINA.

Disposal of old electrical equipment. This symbol on the product or its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to local Civic Office, your household waste disposal service or the place you purchased this item from.

