







## HIGH-FLYING CHAIN-REACTION FUN!


SCAN THE QR CODE TO SEE VIDEO INSTRUCTIONS!



1 ZIPLINX ASSEMBLY

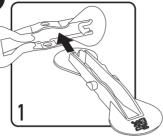


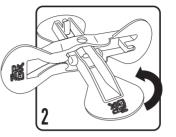


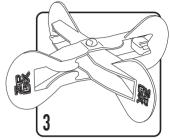


2 ATTACH POWER BAND BEFORE USE


> NOTE: BANDS ARE SHIPPED UNATTACHED TO KEEP ZIPLINX FROM BEING DAMAGED DURING SHIPMENT

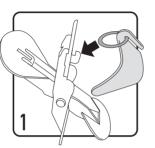


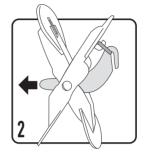


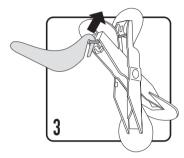

3 LOADING ZIPLINX

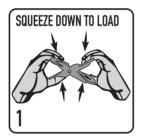

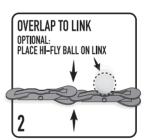

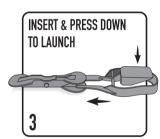




## HERE ARE TWO DESIGNS TO GET YOU STARTED!

PLEASE NOTE: ALWAYS CHECK YOUR ZIPLINX BEFORE USE. CHECK FOR LOOSE PARTS OR SIGNS OF WEAR AND TEAR. DO NOT USE IF DAMAGED. ONLY USE POWER BANDS PROVIDED AND ATTACH ONLY ONE PER LINX.

USE YOUR BEST JUDGEMENT WHEN PLAYING WITH ZIPLINX. USE ON A SMOOTH, FLAT, LEVEL TABLETOP FREE OF OBSTACLES. WHEN LAUNCHING ZIPLINX, NOTHING SHOULD BE DIRECTLY ABOVE THEM.

TO KEEP ZIPLINX FROM LAUNCHING BEFORE COMPLETING YOUR DESIGN, WAIT UNTIL YOU ARE DONE BEFORE INSERTING THE LAUNCHER KEY.

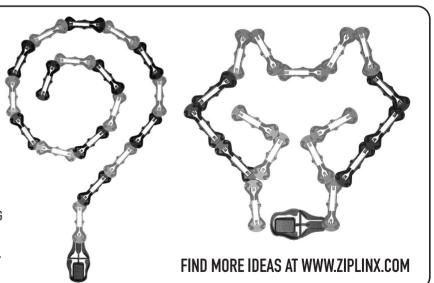

Distributed by John Adams Leisure Ltd. John Adams Leisure Ltd. is constantly endeavouring to improve quality standards and therefore colours, sizes and contents may sometimes vary from those shown. Packaging and leaflets printed on recycled paper wherever possible. John Adams Leisure Ltd., PE28 4YA, England. EU authorised representative: John Adams Leisure EU Ltd., D06 H685, Ireland. For customer services call 01480 414361 or email customerservices@johnadams.co.uk

Please retain this information for reference. MADE IN CHINA.

To see more of our range visit www.johnadams.co.uk

Z030UK-01

