





USING AND CLEANING

Before starting, gently remove the detachable parts of the stencil (if necessary). Blow at a distance of at least 8 to 10 cm from the paper. Never put the tip or the ink cartridge in the mouth. Take breaks between each use. Rinse the tips and caps between each use and let dry for a few minutes. Non-rechargeable. Blopens may stain. We suggest wearing an apron and protecting your furniture and carpets. Stains on skin and fabric can be cleaned with soap. Avoid prewash products that may stain. For tougher stains fabric may have to soak overnight in soap and water. An additional washing may be necessary for the persistent stains. In order to avoid any discoloration, follow the instructions provided by the soap or detergent product manufacturer. Avoid chlorine, chemical cleaners and biological washing powders.

Warning! The markers are indelible on fabric and porous surfaces. We recommend wearing an apron during your art and craft activities and protecting your furniture and carpets. Wash hands thoroughly after use.



112 quai de Bezons 95100 Argenteuil - FRANCE www.lansay.fr

BLOPENS ® is a registered trademark of JAKKS Pacific, Inc and is used with permission. ©2023 JAKKS Pacific, Inc. All Rights Reserved. Licensed by JAKKS Pacific, Inc. CE

Ref: 23691



Contains small parts. Choking hazard.

Please remove all plastic tags, ties, and any other protective elements which do not make up part of the toy, before giving it to the child. Please retain information for future reference. Colors and contents may vary from those shown. Do not aim for eyes and face. In case of contact with the eyes, rinse thoroughly with clear water and consult a doctor bringing the product with you. Should not be inhaled. Wash hands well after use.