 
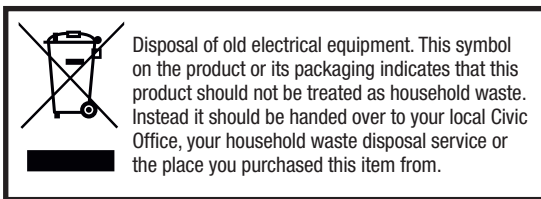 


Replacing Batteries

Please note that replacing the batteries will delete your high scores.

Battery Safety Information

- THIS SIDE UP® requires 3 x AA batteries (Included).
- We recommend alkaline batteries for optimum performance.
- An adult should install the batteries and take note of the following - open the cover on the base of the unit by using a cross head screwdriver. Insert the batteries making sure the + and - signs on the batteries are aligned with the corresponding + and - markings inside the compartment.
- Do not recharge non-rechargeable batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Rechargeable batteries are to be removed from the toy before charging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Insert batteries in the correct polarity.
- Remove exhausted (used) batteries from the toy.
- Remove batteries from the toy if it is not going to be used for a long period of time.
- Do not short-circuit the supply terminals.
- Batteries should be replaced by an adult.
- Do not attempt to power battery products from the mains supply and do not insert connecting wires into electrical socket outlets.
- Dispose of used batteries at a recycling point. Never dispose of batteries in fire.

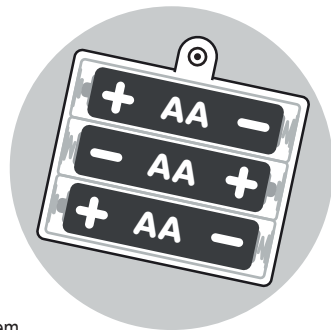

Disposal of old electrical equipment. This symbol on the product or its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to your local Civic Office, your household waste disposal service or the place you purchased this item from.

WARNING! Not suitable for children under 36 months. Choking hazard – contains small parts.

© 2023 John Adams Leisure Ltd. IDEAL® and This Side Up® are registered trademarks of John Adams Leisure Ltd.

John Adams Leisure Ltd., Hercules House, Pierson Road, Enterprise Campus, Alconbury Weald, Huntingdon, Cambridgeshire. PE28 4YA. England. EU authorised representative: John Adams Leisure EU Ltd., 1 Castlewood Avenue, Rathmines, Dublin 6, D06 H685, Ireland.

 
For customer services call 01480 414361 or email customerservices@johnadams.co.uk

Please retain this information for reference. MADE IN CHINA.

To see more of our range visit www.idealboardgames.co.uk



IDEAL®

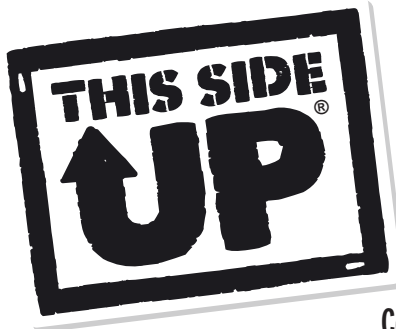

AGES 8+ | 1+ PLAYERS



Scan this code to watch our 'How To Play' video.

Contents: This Side Up® game unit.

THIS SIDE UP® INSTRUCTIONS

Object:

Follow the game's commands by keeping the correct box side facing up.

The first time you play:

Replace the demo batteries supplied with new alkaline batteries – see battery information later.

How to play:

Have you ever taken delivery of a parcel to find that it looks like it has been kicked all the way to your door and the courier has totally ignored the signs showing which way up it should be?

Follow the game's commands making sure you always keep the correct side facing up. This Side Up® contains clever electronics which know which way up it is facing so as each command is called out, throw the box up to release your grip then as you catch it, correctly orientate it so that the correct side is facing up before time runs out. If you respond correctly, you will get another command. Keep going to get the highest score possible. If you're not fast enough, or have the wrong side facing up, you're out!

There are 4 games:

Game 1: Solo - a single player game which uses just the box's label colours.

Game 2: Solo Extreme - a single player game which uses the box's label colours and the caution word stickers.

Game 3: Party - a group game which uses just the box's label colours.

Game 4: Party Extreme - a group game which uses the box's label colours and the caution word stickers.

11147_01_THISSIDEUP_INS_PRT01_050322

Quick Start (Solo and Solo Extreme)

- Press either the **START** or **MODE** button to wake up the game.
- The game will automatically go to **Game 1: Solo** or you can press the **MODE** button a second time to scroll to **Game 2: Solo Extreme**.
- Holding the box on both short sides with the yellow side facing up, press the **START** button with your thumb.
- Listen to the commands as they are called out.
- After each command **THROW THE BOX UP** and catch it with your hands on two opposite sides with the correct side facing up.
- Keep going, but if you get the wrong side up or you run out of time, you're out. The game reports your personal score.
- To play the same game again, simply press the **START** button, or press the **MODE** button to scroll to a different game.



Winning the Solo games

Try to beat your personal score. How far can you go?

Quick Start (Party and Party Extreme)

- Players stand in a circle within an arms distance of each other.
- The oldest player presses either the **START** or **MODE** button to wake up the game.
- Press the **MODE** button 3 times to access **Game 3: Party** or press the **MODE** button 4 times to scroll to **Game 4: Party Extreme**.
- Holding the game on both short sides with the yellow side facing up, press the **START** button with your thumb.
- Get ready to follow the commands as they are called out, but in these two games, instead of throwing the parcel up and catching it yourself, you gently throw it to the next player to your left. The receiving player must catch the parcel and quickly orientate it to the correct side facing up.
- On the next command, throw the box to the next player on the left.
- Keep going, but if a player gets the wrong side up or runs out of time, they are out.
- The game will now ask to be passed to the next player who presses **START** so that the game can continue with those remaining.

Winning the Party games

 
Be the last player in the game.

Sleep Mode:

This Side Up® will go to sleep after a few seconds of inactivity. Press the **START** or **MODE** button to wake the game up.

Ready? Whoops, hold the box to start.

If you are not holding the box correctly when the game tries to start, it will let you know by saying "Ready? Whoops, hold the box to start". Simply adjust your hands so that they are flat against the box on opposite sides.

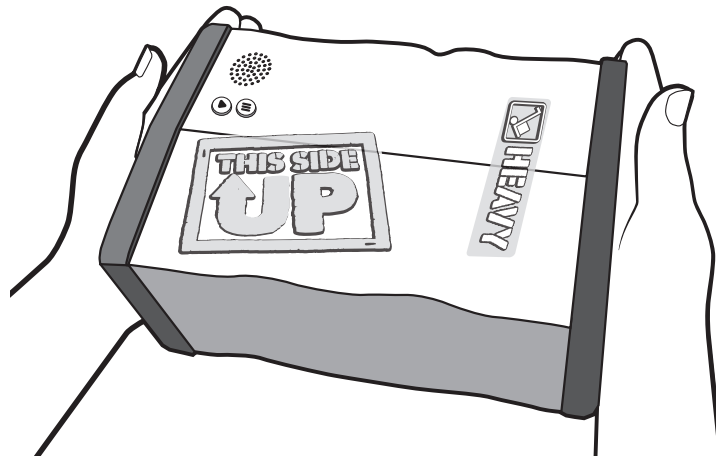

Also, when catching the box for each move during the game, make sure you always have your hands flat against the box on opposite sides.

Volume

To adjust the game volume press and hold both the **MODE** and **START** button for 1 second to change high to low volume and visa versa.

High Score

To hear the current high score in any of the game modes, press and quickly release both the **MODE** and **START** button at the same time.

Caution

Be careful when throwing the parcel. Make sure any breakable objects, small children or animals are safely out of the way in case the box is dropped.